HONDA **INSTALLATION INSTRUCTIONS**	Accessory **REAR SUNSHADE P/N 08R10-S82-100**	Application **1999 ACCORD 2-DOOR**	Publications No. **All 20042** Issue Date **OCT 1998**

PARTS LIST

Rear sunshade

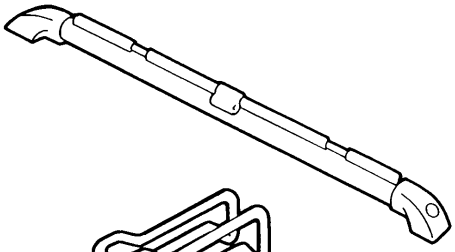

2 Hooks

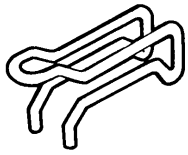

Right sunshade bracket

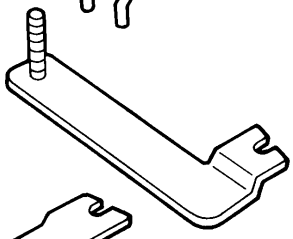

Left sunshade bracket

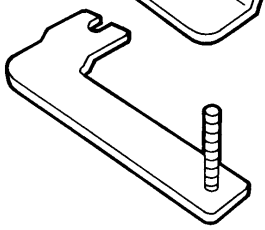

2 Spacers

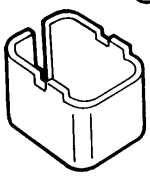

2 Caps

2 Flange nuts

2 EPT cushions

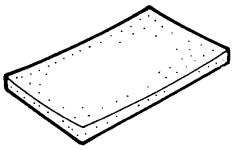

TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Ratchet
9 mm Socket
Utility knife
Felt-tip pen
Tape measure

INSTALLATION

NOTE: These instruction show the sunshade bracket on the right (passenger's) side being installed. The same procedure applies to installing the left (driver's) side.

1. Open the trunk lid. Remove the right passenger's side rear speaker grille (three screws), and pry up on the three retaining tabs. Take care not to damage the retaining tabs.

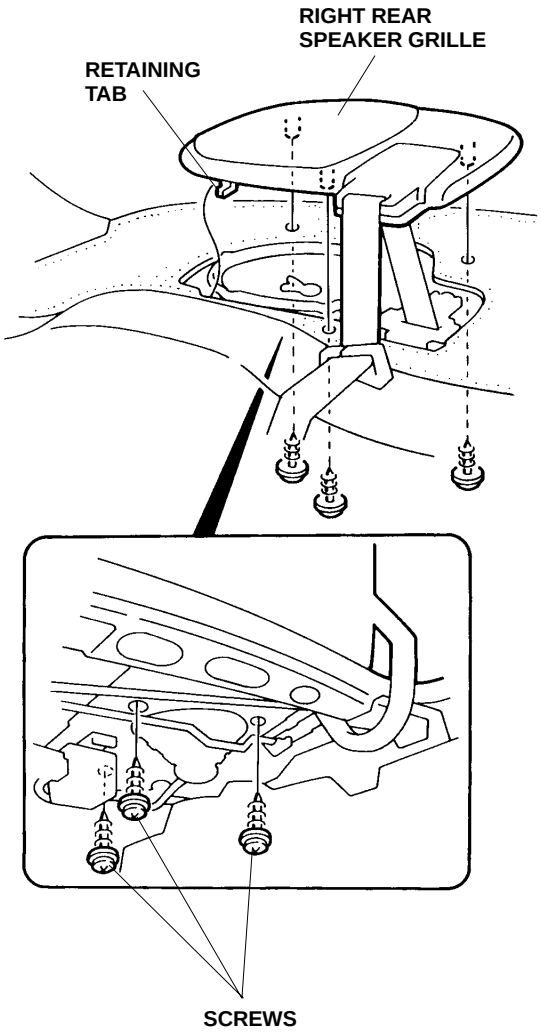

© 1998 American Honda Motor Co., Inc - All Rights Reserved.

2. Insert the ignition key into the key cylinder on the rear tray, and turn the key while you pull down the left and right seat-backs.

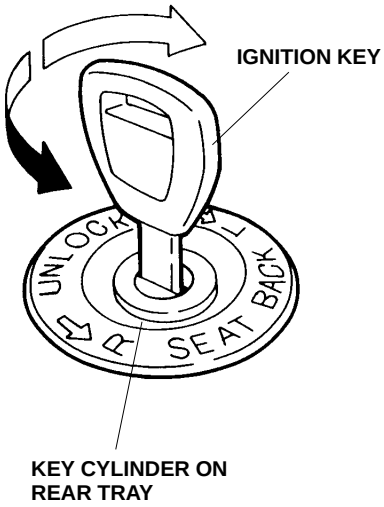

3. Remove the rear bulkhead cover (four clips).

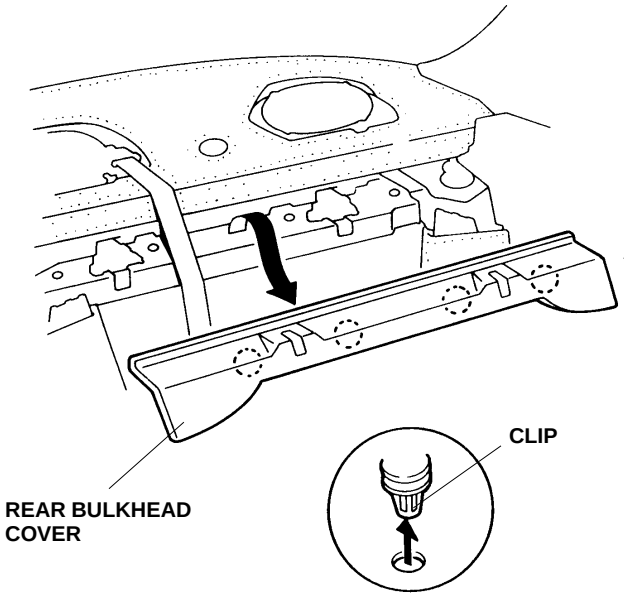

4. Using a tape measure and a felt-tip pen, measure the right side of the rear parcel shelf, and mark the measurement as shown. Make a 10 mm cross-cut with a utility knife through the mark you just made.

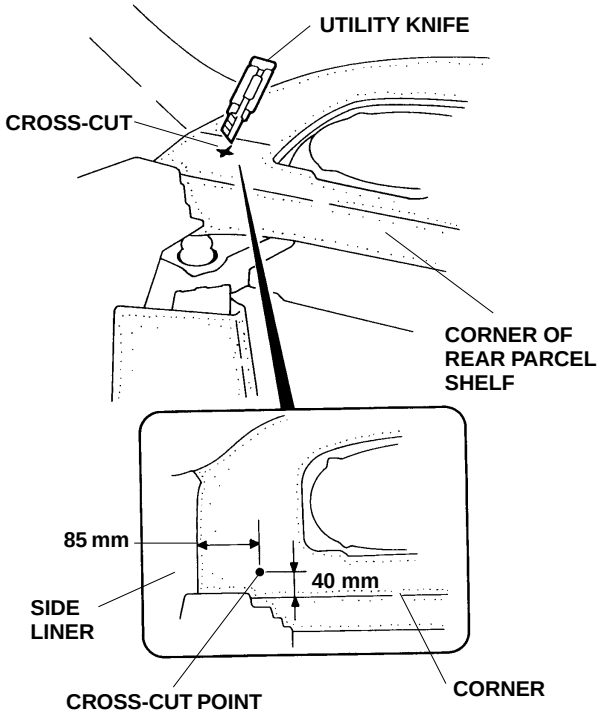

5. Loosen the four bolts securing the right speaker to the metal parcel shelf.

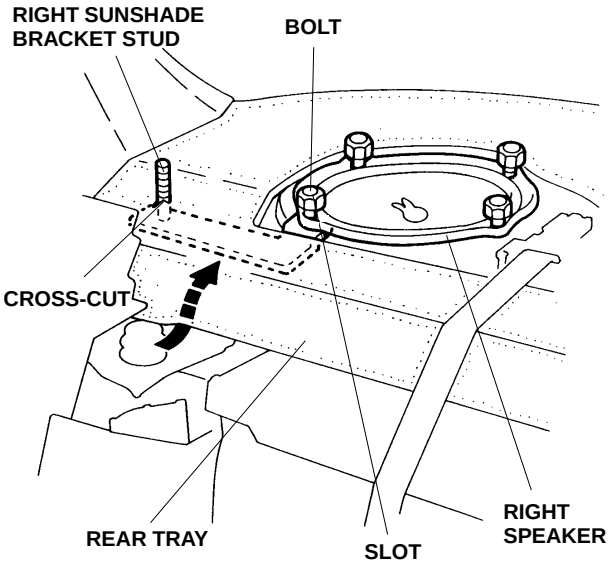

6. Position the right sunshade bracket with its stud extending out through the cross-cut you made in the rear parcel shelf. Slide the cutout in the other end of the right sunshade bracket under the speaker bolt.

All 20042 (9810)
© 1998 American Honda Motor Co., Inc - All Rights Reserved.

7. Retighten the four speaker bolts, and make sure that the right sunshade bracket is tightened securely; it should not move or rattle.

8. Remove the left rear speaker grille, then repeat steps 4 through 7 to install the left bracket on the left side of the vehicle.

9. Reinstall both rear speaker grilles.

10. Install the rear sunshade over the studs from the brackets with its handle facing the front, and loosely install the two flange nuts. The blind will not roll up if it is installed improperly.

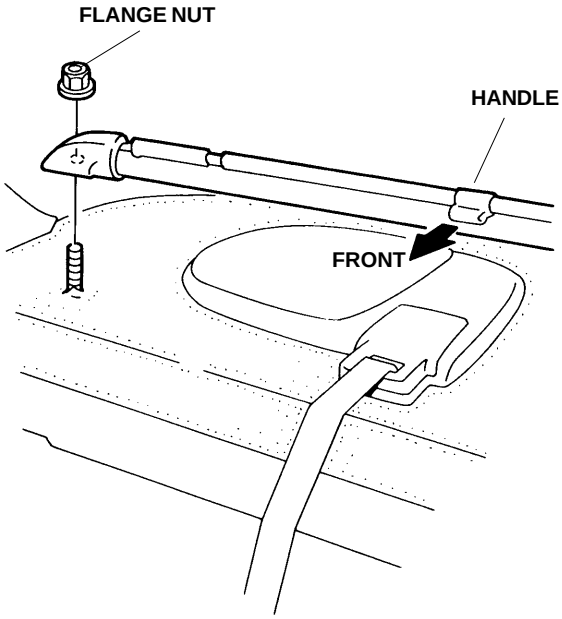

11. Slide the spacer over each stud extending from the brackets under the sunshade; then tighten the two flange nuts.

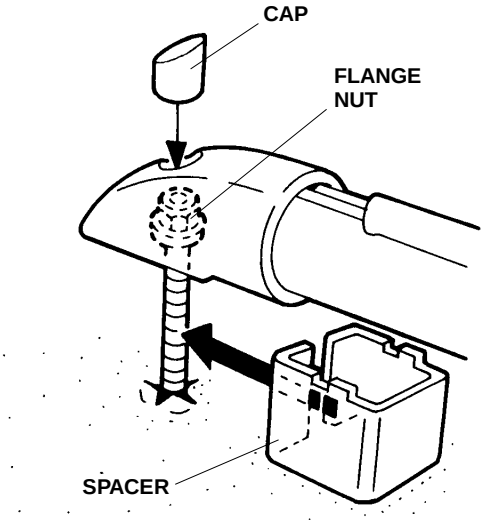

12. Install the caps over each nut.

13. Gently pull down on the headliner, and slide one hook (from the kit) onto the headliner in the area shown.

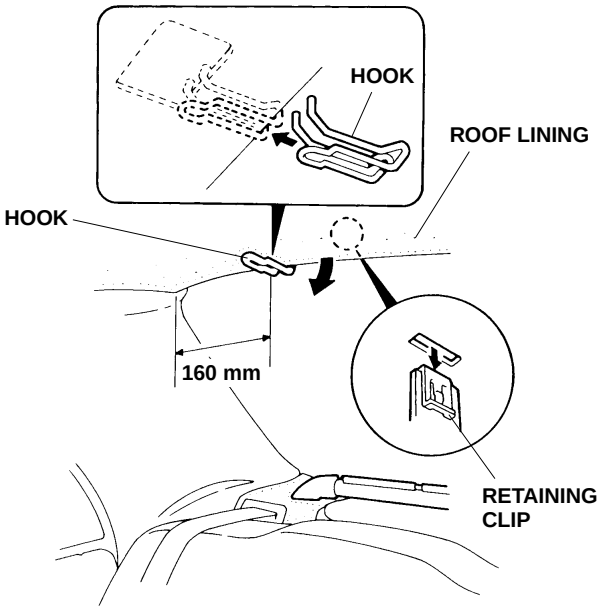

14. Attach one cushion tape to the inside of the headliner over the hook to secure the hook in place.

15. Repeat steps 13 and 14 to install the hook on the other side of the vehicle.

16. Reinstall the headliner clips if necessary.

17. Pull out the sunshade, attach it to the two hooks, release and return it to the parcel shelf several times to check for smooth operation.

© 1998 American Honda Motor Co., Inc - All Rights Reserved.